



Removal


- 1 Remove door lining (72–105).

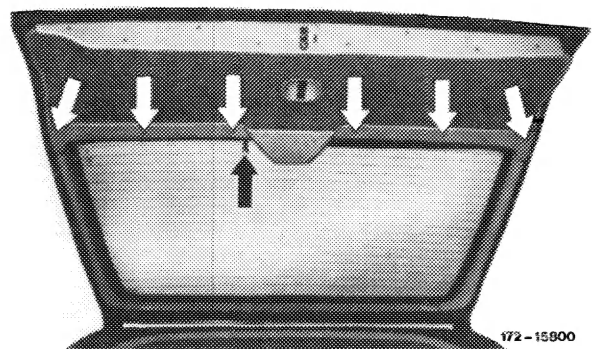


- 2 Unscrew rail on back door bottom.

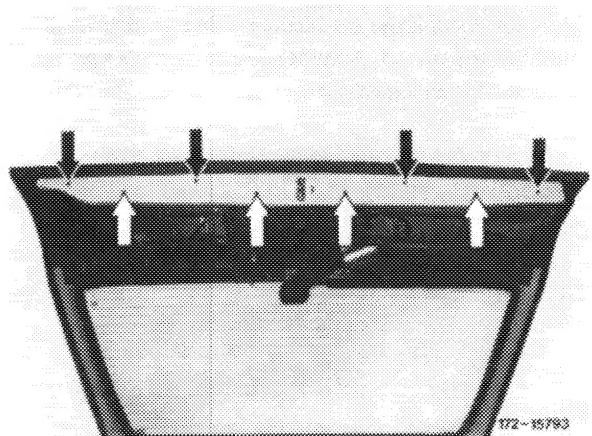

- 3 Unscrew inside door handle.

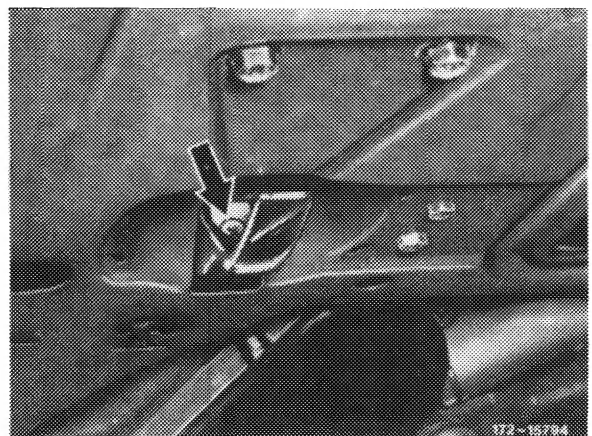


- 4 Pull plug for back door contact switch from right-hand side of lock.

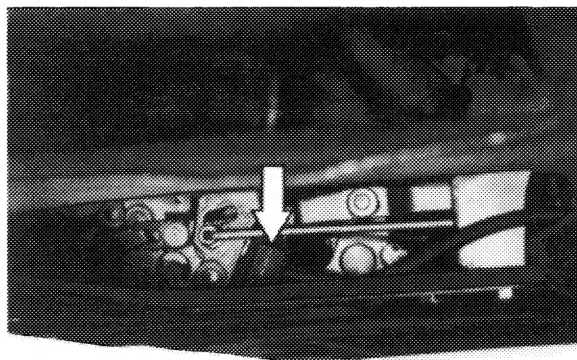


172-15795

- 5 Disconnect locking linkage at left of lock.

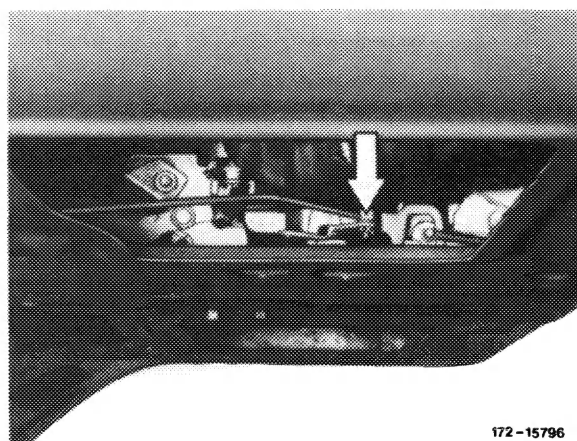


172-15796

- On central locking system, additionally push off the lock for linkage on vacuum element (arrow) and pull linkage out of element (do not remove vacuum element for this purpose).

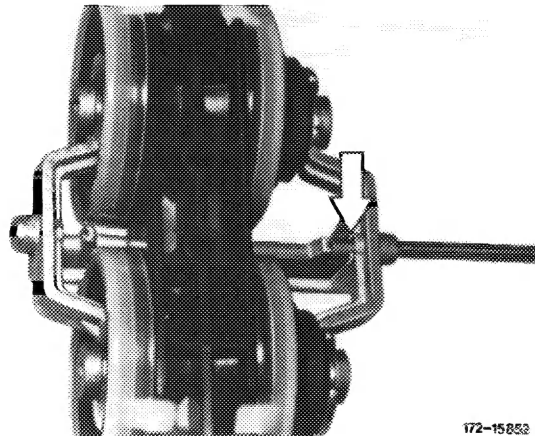


172-15853

- 6 Unscrew fastening screws of door lock.

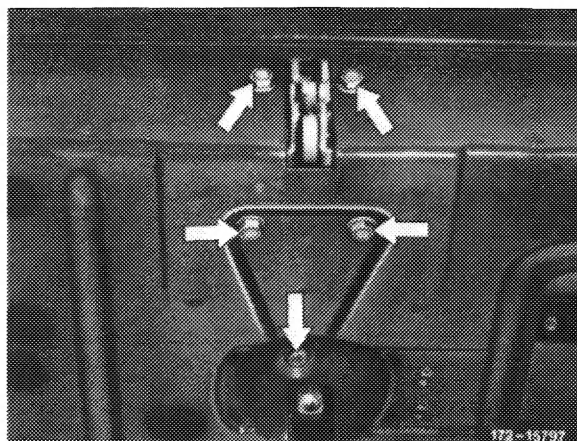


172-15797

7 Lock rotary catch of lock. This will make the lock less wide for easier removal.

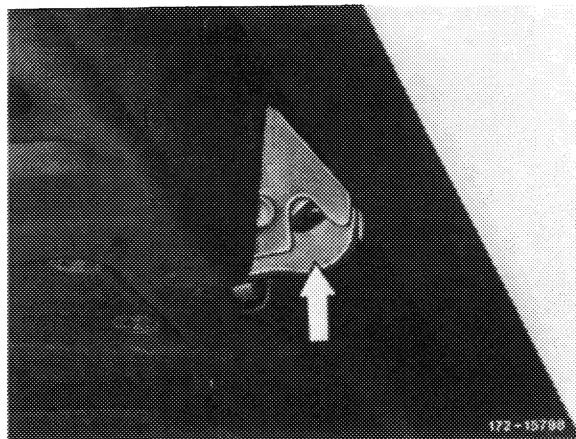


8 Remove lock from back door to the left.

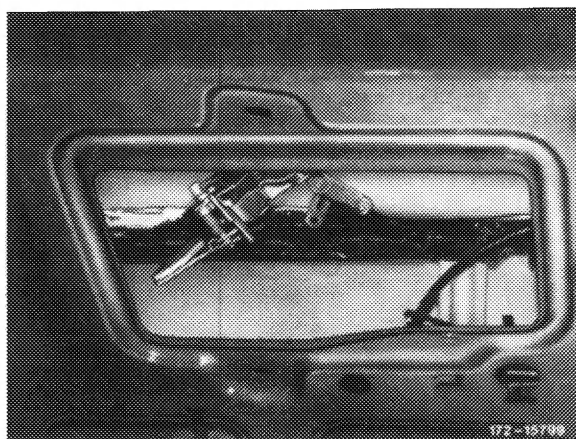


Installation

9 Install lock and attach.

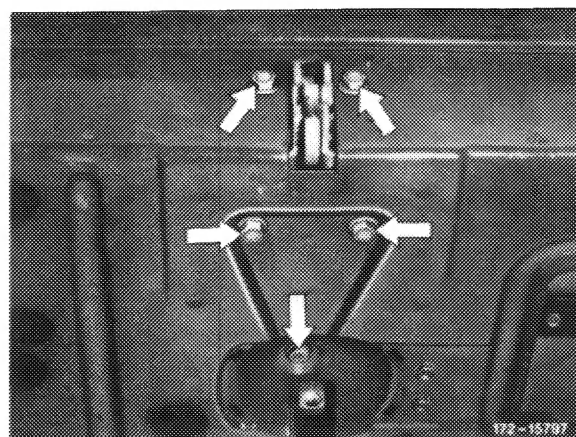


10 Attach plug for back door contact switch to right-hand side of lock.

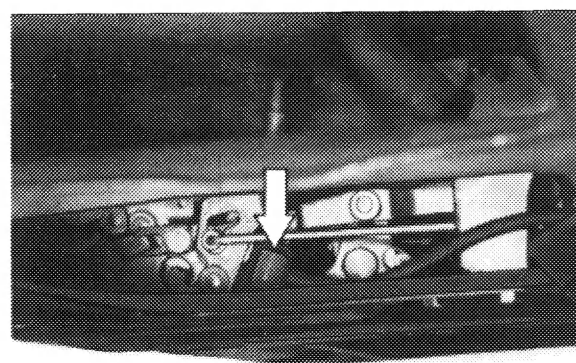


172-15795

11 Attach locking linkage at left of lock.

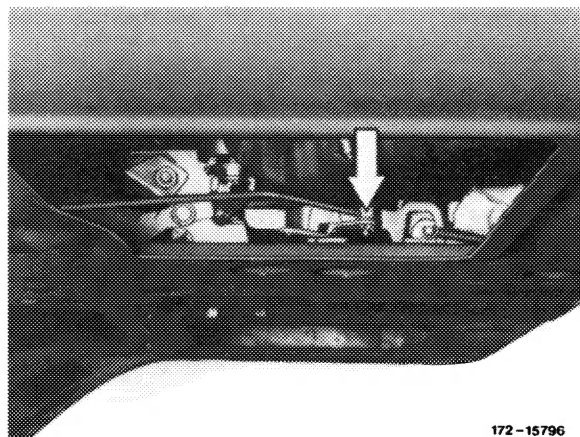


- For central locking system, additionally attach lock linkage to vacuum element.

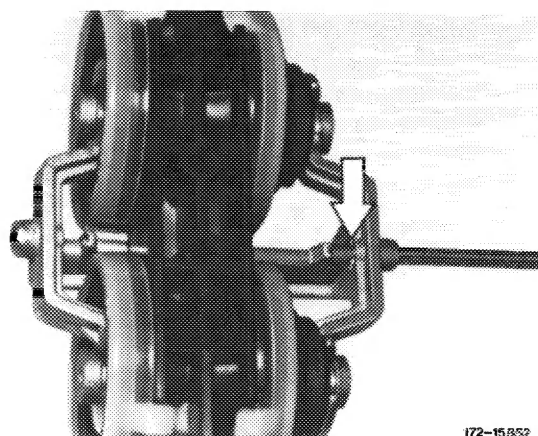

- Adjust vacuum element on the two fastening screws in slots in such a manner that in unlocked condition the central locking system has no play on linkage toward lock.

12 Check relief clearance on outside handle and adjust, if required.

Note: If the relief clearance is more or less than 1 mm, carry out adjustments listed under item 13.

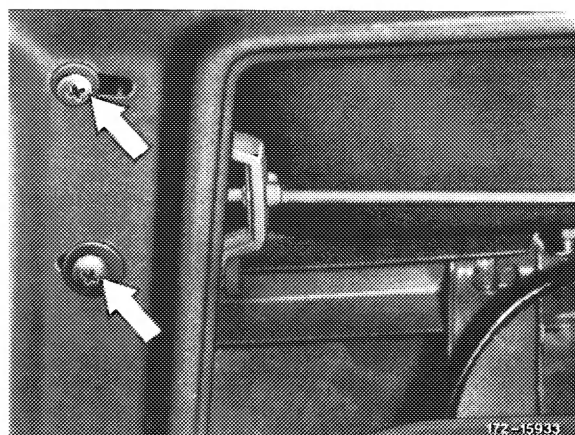

13 Latch the lock by means of safety plunger. Adjust relief clearance (1 mm) by inserting a small screwdriver through the thread of the upper lock attachment. Install upper securing screw in back door lock.

Caution:

After having tightened the upper securing screw in the lock, relief clearance must be checked and, if necessary, readjusted.

14 For further installation proceed vice versa.

